

| You are in: Lozier > Products > Wall End Display Stabilizer

Wall End Display Stabilizer

Part Number:



Anchor a freestanding Wall End Display to an Island section with a Wall End Display Stabilizer.

Product Details:

- Anchors freestanding 2', 30", 3', or 4'W Wall End Display to 3' or 4' Island Sections
- Accommodates up to 9" offset (3" increments)
- Required when a Wall End Display or Contoured End Display has an unacceptable freestanding height-to-depth ratio (Levelers exceed 6:1)
- Wall End and Gondola End Section Top Rail not required
- Stabilizes top of WEDNB (No Base End Cap)

WEDS INCLUDES (ordered separately)

- Wall End Display End Top Rail (WEDER)
- Wall End Display Gondola Top Rail (WEDGR)

How to Order

Wall End Display End Top Rail

- Wall End Display End Top Rail is part of Wall End Display Stabilizer, and can be ordered separately


Product Options and Numbers

Example Part #: **WEDER 48 PLT**

Wall End Display End Top Rail: **WEDER**

Width: 24", 30", 36", **48"**

Standard Finish: **PLT**, Optional Catalog Colors

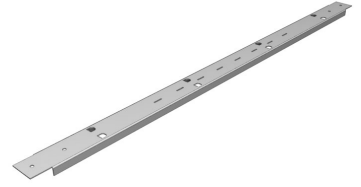

Suffix Key	
PLT	- Platinum

Wall End Display Gondola Top Rail

- Wall End Display Gondola Top Rail is part of Wall End Display Stabilizer, and can be ordered separately

Product Options and Numbers

Example Part #: **WEDGR 48 PLT**

Wall End Display Gondola Top Rail: **WEDGR**

Width: 36", **48"**

Standard Finish: **PLT**, Optional Catalog Colors



Suffix Key	
PLT	- Platinum