

INSTALLATION INSTRUCTIONS

LOAD EASER BASE BRACKET

- STEP 1:** If section is set up, remove base deck and base front as described in Basic Shelving Instructions.
- STEP 2:** Place Load Easer Base Bracket in center of section with LEBB Stabilizer perpendicular to base bracket. If more than (1) is used evenly space under deck.
- STEP 3:** Replace base deck, adjust Load Easer Base Bracket leveling legs up or down so base deck is level and resting slightly on Load Easer Base Bracket. Adjust legs so that LEBB Stabilizer is crosswise to base bracket.
- STEP 4:** Replace base front.
- NOTE:** Each load spreader adds an additional 500lbs of capacity to deck.

